

Re: Found no partitions during initial setup – can't IPL the server

Re: Found no partitions during initial setup – can't IPL the server

Source: <http://newsgroups.derkeiler.com/Archive/Comp/comp.sys.ibm.as400.misc/2005-07/msg00284.html>

- *From:* "Damir" <nomail@xxxxxxxxxxxxxx>
 - *Date:* Tue, 19 Jul 2005 17:23:04 +0200
-

We followed procedure for partitioning the preinstalled server and succeed.

Now we have some problems about connecting 5250 emulator console from HMC to iSeries.

If we stop everything, then plug everything out of the power source, and plug back and start everything then 5250 works. If we only make restart from HMC without powering off the server, when partition goes up we can't connect with 5250 emulator to the partition.

It says 0023 on the bottom of the 5250 screen.

Also – when we turn off the server, HMC blocks out, and we have to wait 5 minutes for screen to refresh so we can turn off the HMC or start the iSeries again.

"Pat Landrum" <pat_landrum@xxxxxxxxxxxx> wrote in message
<news:TM2dnR8SFK0xsEHfRVn-pQ@xxxxxxxxxxxxxx>

> Damir,

>

> The partitions need to be configured via the HMC. Hopefully, your IBM

> Business has given you a LVT (LPAR Verification Tool) printout so you know

> how the partitions are to be set up.

>

> Regards,

> Pat Landrum

> "Damir" <nomail@xxxxxxxxxxxxxx> wrote in message

> [news:dbblrh\\$dgms1@xxxxxxxxxxxxxx](news:dbblrh$dgms1@xxxxxxxxxxxxxx)

>> We are trying to install a 9406-570 iSeries server at our customer.

>>

>> This is my first installation of server that large (I installed some 520

>> and

>> 270) and first time I am dealing with HMC and partitions.

>>

>> We followed steps in installation guide, and correctly installed server

>> and

>> configured the HMC.

Re: Found no partitions during initial setup – can't IPL the server

Re: Found no partitions during initial setup – can't IPL the server

>>
>> In the HMC, we can see the server, but under "Partitions" and "System
>> Profiles" there is no partition! (there is nothing)
>>
>> Server had to come preinstalled with one OS (only one partition, I guess)
>> and I am sure that I correctly configured HMC.
>>
>> Because there are no partitions, every time we start server in
>> "Autoconfigure partitons" mode we get SRC B2003110 (which means there is
>> no
>> partitions)
>>
>> Is it possible that HMC is malfunctioning?
>>
>> We also have twinax card in 570 and twinax console, but when we try to
>> boot
>> with twinax console we cannot make connection to the iSeries, all the
>> time
>> there is 1/80 on the console.
>>
>>
>>
>
>

• **References:**

- ◆ **Found no partitions during initial setup – can't IPL the server**
 ◇ From: Damir
- ◆ **Re: Found no partitions during initial setup – can't IPL the server**
 ◇ From: Pat Landrum

- Prev by Date: **Re: Querying AS400/DB2 with JDBC for ASCII sorted result set**
- Next by Date: **Issues with Socket Program**
- Previous by thread: **Re: Found no partitions during initial setup – can't IPL the server**
- Next by thread: **OZDASOINIT debugging problem**
- Index(es):
 - ◆ **Date**
 - ◆ **Thread**